

Map switch relocation kit

Installation Notes:

Before beginning the installation, review the instructions completely to ensure you are capable of completing the installation. Ensure you have all the necessary tools and supplies needed to complete the installation.

Map switch fitment:

KTM 2023+ 250/300 XC Models

KTM 2024+ 250/300/ XC-W Models

Husqvarna 2023+ 250/300 TX Models

Husqvarna 2024+ 250/350 TE Models

Gas Gas 2024+ 250/300 EC/EX Models

** Steering stem bolt and bar risers create a 1" space for mounting handle bar accessories that can be mounted to your 7/8" bar**

Steering stem bolt can be used on nearly every KTM off-road bike, 2014+ Husqvarna, and 2021+ GasGas. Verify clearance for the bolt and intended accessory.

Tools Required:

Metric Socket Set

Torque Wrench




MOTOVICTUS

www.motovictus.com

Map switch relocation kit

1. Wash the motorcycle and remove all dirt and debris from around the clutch cover.
2. Loosen the steering stem neck pinch bolt
3. Loosen and remove the handlebar-mount bolts
4. Loosen and remove the steering stem bolt
5. If remounting the map switch, trace the wire and reroute to the steering stem bolt.

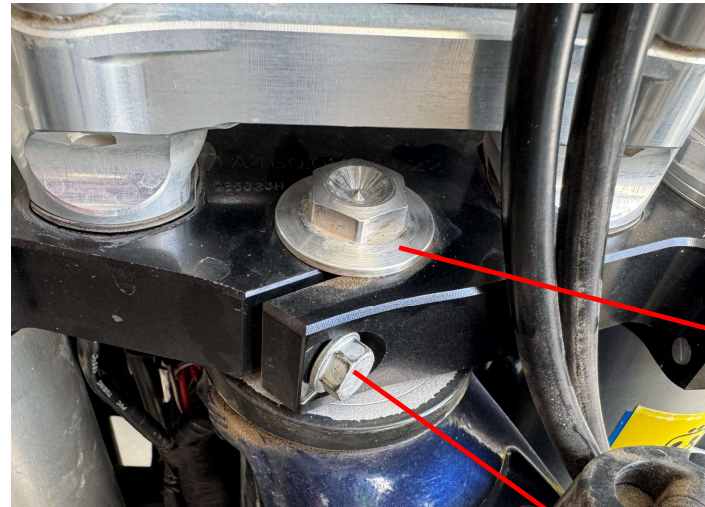

Steer stem bolt

Steering stem neck
pinch bolt



Handlebar-
mount bolts

6. Install MOTOVICTUS steer stem nut and torque to 12 Nm (8.9 ft-lbs)
7. Install map switch or another device to the steering stem bolt.
Note: Ensure wire routing is sufficient before reinstalling the handlebars
6. Place and align the 10 mm bar risers under the handlebar mount



9. Install the provided longer handlebar mount bolts and torque to 40 Nm (29.5 ft lbs).
10. Tighten and torque the Steering stem neck pinch bolt to 20 Nm (14.8 ft lbs)



Final Checks

After installation, check for any free play or catching in the steering, ensure all wiring allows for full handlebar rotation and will not inhibit handling.

If any issues are experienced contact MOTOVICTUS at support@motovictus.com

Steering stem bolt for alternate applications

The steering stem bolt can be used in alternate applications for mounting any accessory that would normally mount to your 7/8" handlebars.

Ensure there is sufficient clearance for the steering stem bolt, the intended accessory, and any flex in the handlebars if they are rubber mounted. We recommend 5mm of minimum clearance if used with rubber mounted handlebars.

The steering stem bolt extends 23mm above the surface of the triple clamp and provides 20 mm of clamping space for a 7/8" handlebar accessory.

